


Pin table	Pin 1	Pin 6
RS-232	TX-RS-232	RX-RS-232
Modbus	RS-485 (+) D0 Modbus (A/A')	RS-485 (+) D1 Modbus (B/B')

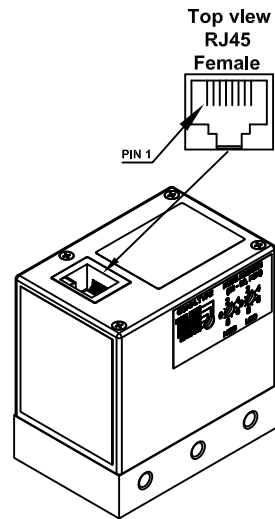

Explanation code P.C. board

<p>A RS-232 / RS-485</p> <p>Not used (analog I/O not available)</p> <p>D +15Vdc...+24Vdc power supply</p>	<p>Normally Closed (NC)</p>	
---	-----------------------------	--

For available bus protocols over RS-485 see instruction manual IQ+ FLOW (9.17.045)

Application stand alone

It is also possible to connect the IQMx with a Bronkhorst plug-in power supply (7.03.424)
For information and specifications of this power supply visit the Bronkhorst website.